
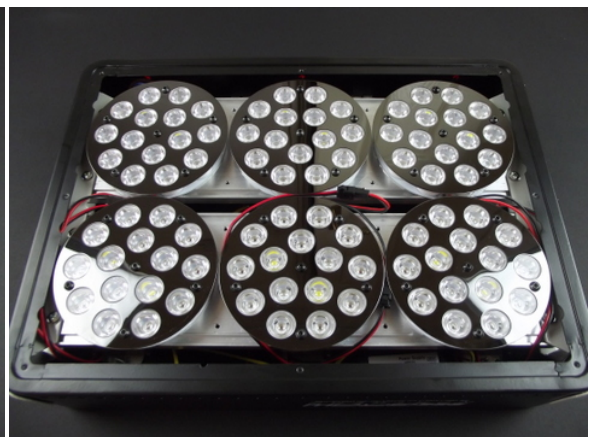


Led Driver Replacement

REMOVE POWER KABEL BEFORE STARTING THIS PROCEDURE!



STEP 1

Un-screw top plate


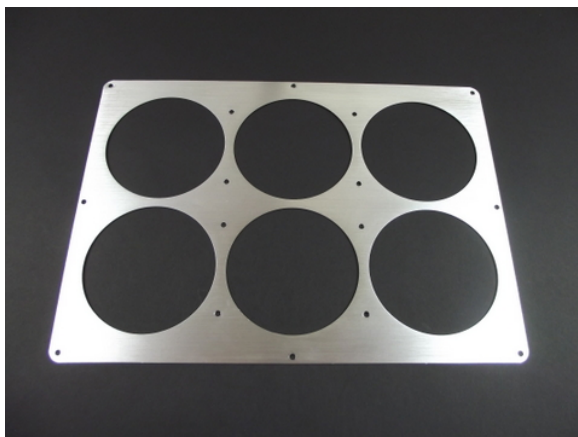


STEP 2



Remove LED BARS

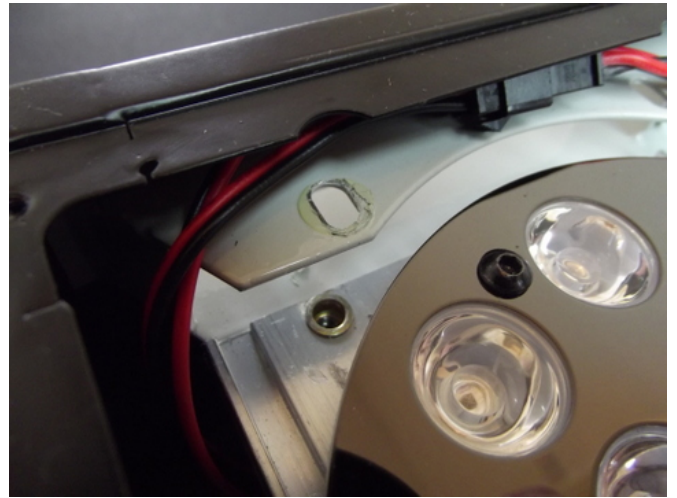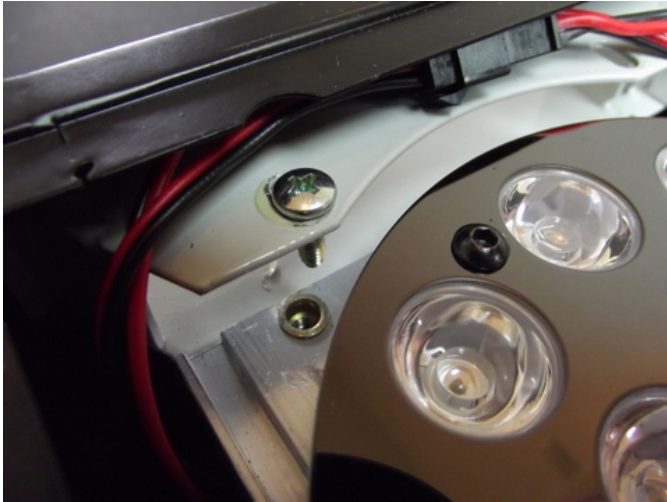

Unscrew the 8 screws, which the bars are attached to

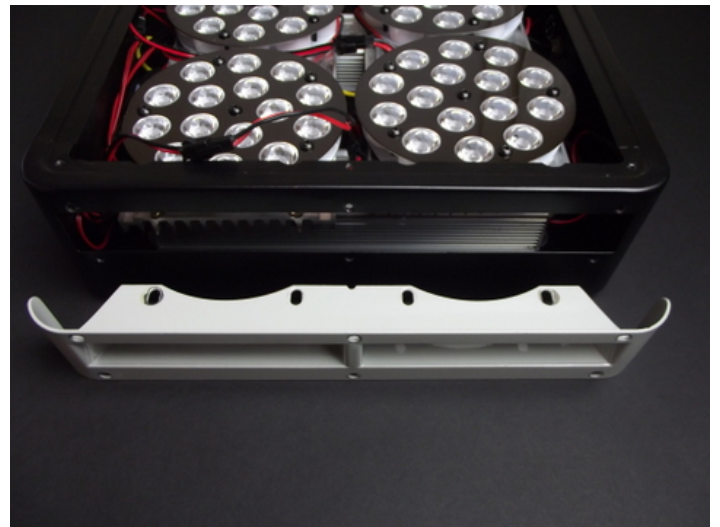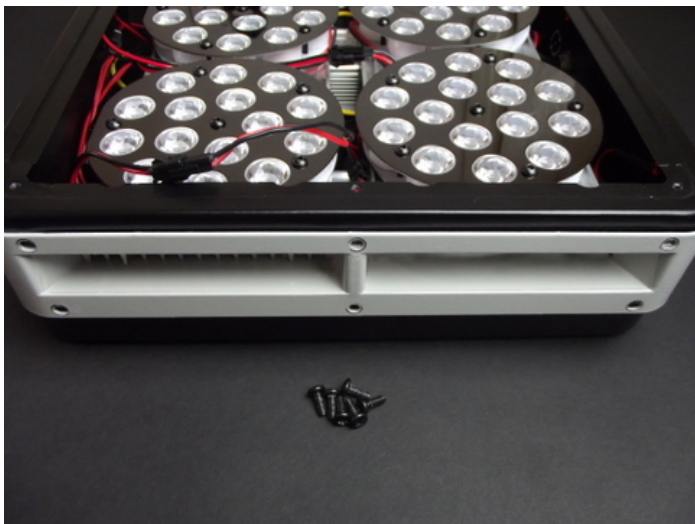



Unscrew 1 side plate

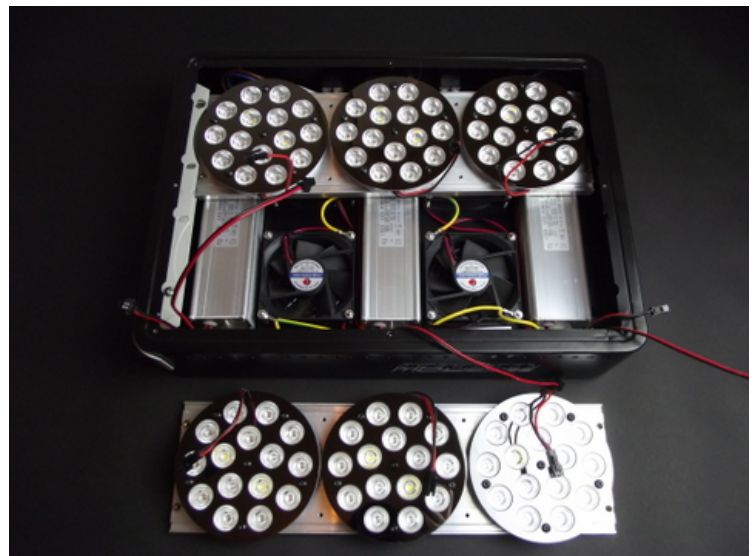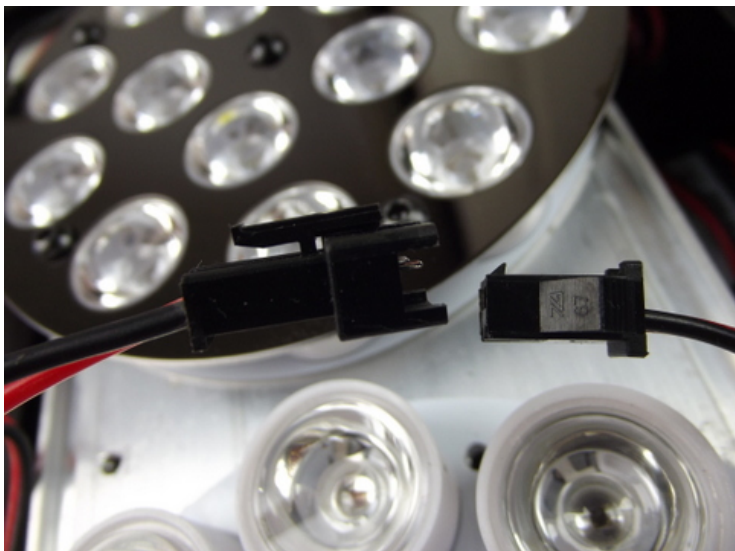


Remove LED bars

STEP 3

Replace Driver

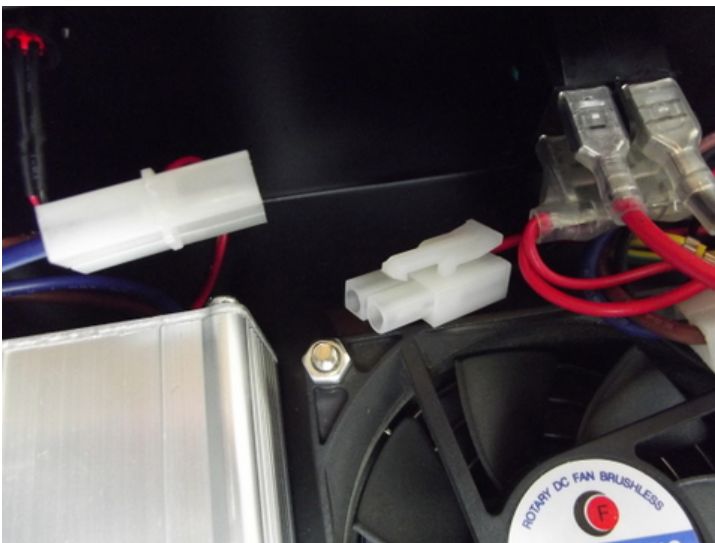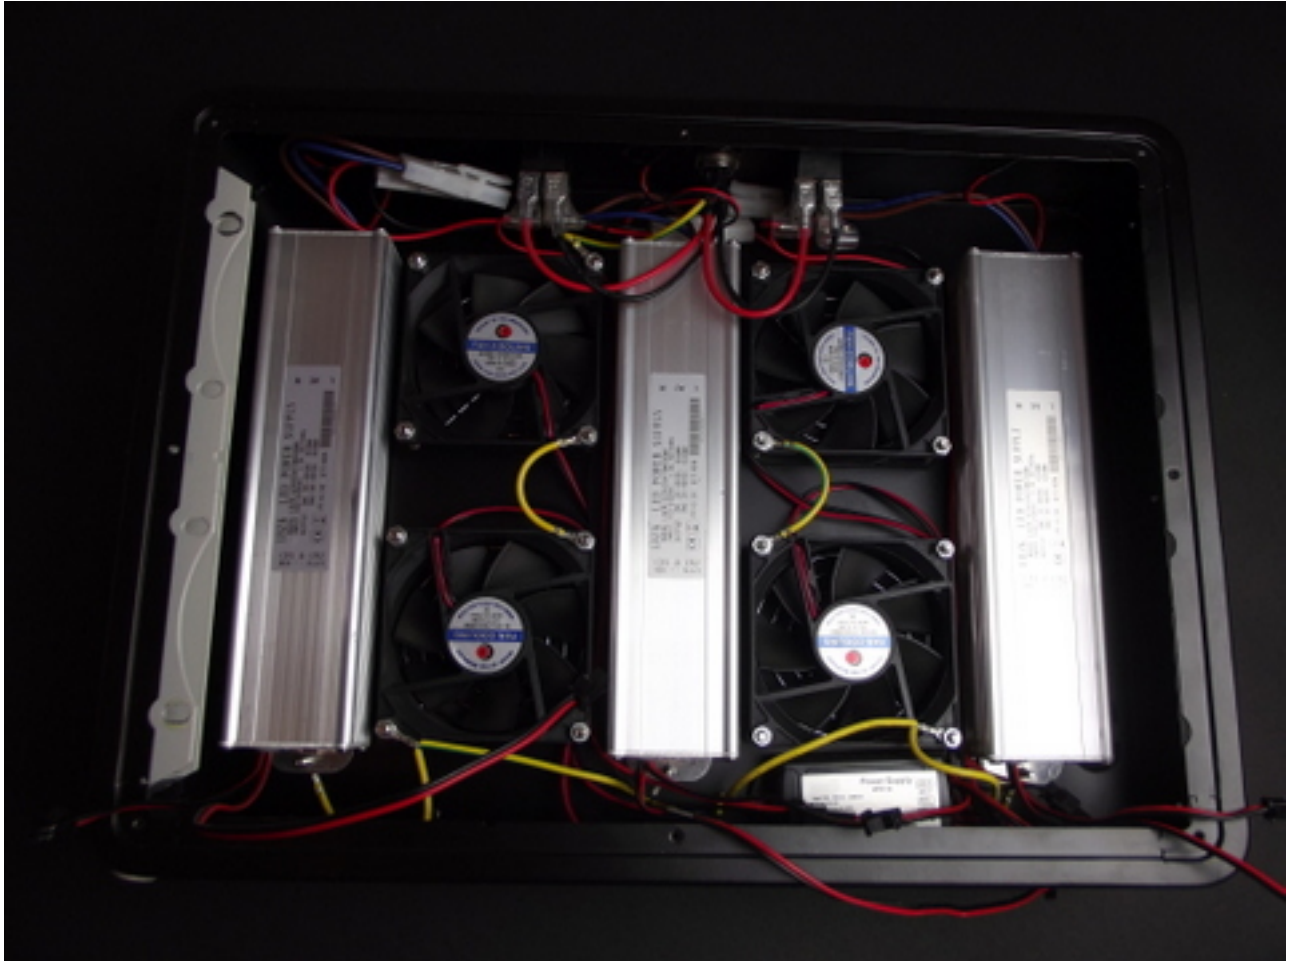

Disconect Cable

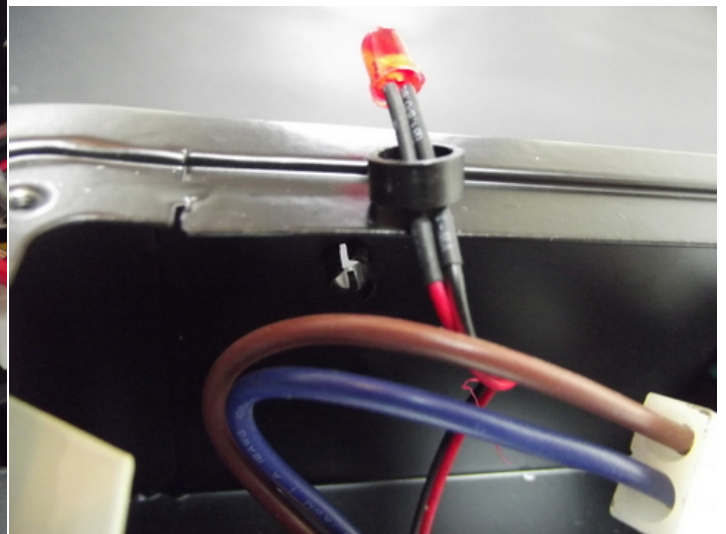

Remove indicator led